# Building 11 Emergency Action Plan

## Definition of Terms and Symbols

**Location of building exit:** A fire exit that is not wheelchair accessible.

**Location of accessible exit:** An exit that is accessible to those with a mobility impairment. It is wheelchair accessible.

**Location of area of refuge:** A safe area to stay and await assistance during a fire. This may be a dedicated area of refuge either inside or outside the building, or this may be an enlarged floor level landing inside an exit stairwell.

**Interior area of refuge:** The extent of an area dedicated for the safe harboring of persons awaiting assistance during an emergency.

**Exit stairwell location:** A stairwell in a fire-safe enclosure. The letter designates the stairwell's identifier for emergency personnel.

**Boundaries of the exit access corridor:** The extent of a corridor, hallway, or aisleway used for the purpose of gaining access to an exit door or exit stairwell. Must be kept clear for instantaneous use.

**Muster point:** A location at a safe distance outside the building where building personnel must gather during an emergency to await instructions and report any emergency information.

**Tornado shelter:** An area designated for safe harbor during an extreme weather emergency or for interior shelter-in-place.

**Outdoor area of assisted rescue:** The extents of an outdoor area dedicated for the safe harboring of persons awaiting assistance during an emergency.

M–1891–38a
Apr 09

# Building 11 First Floor Emergency Action Plan

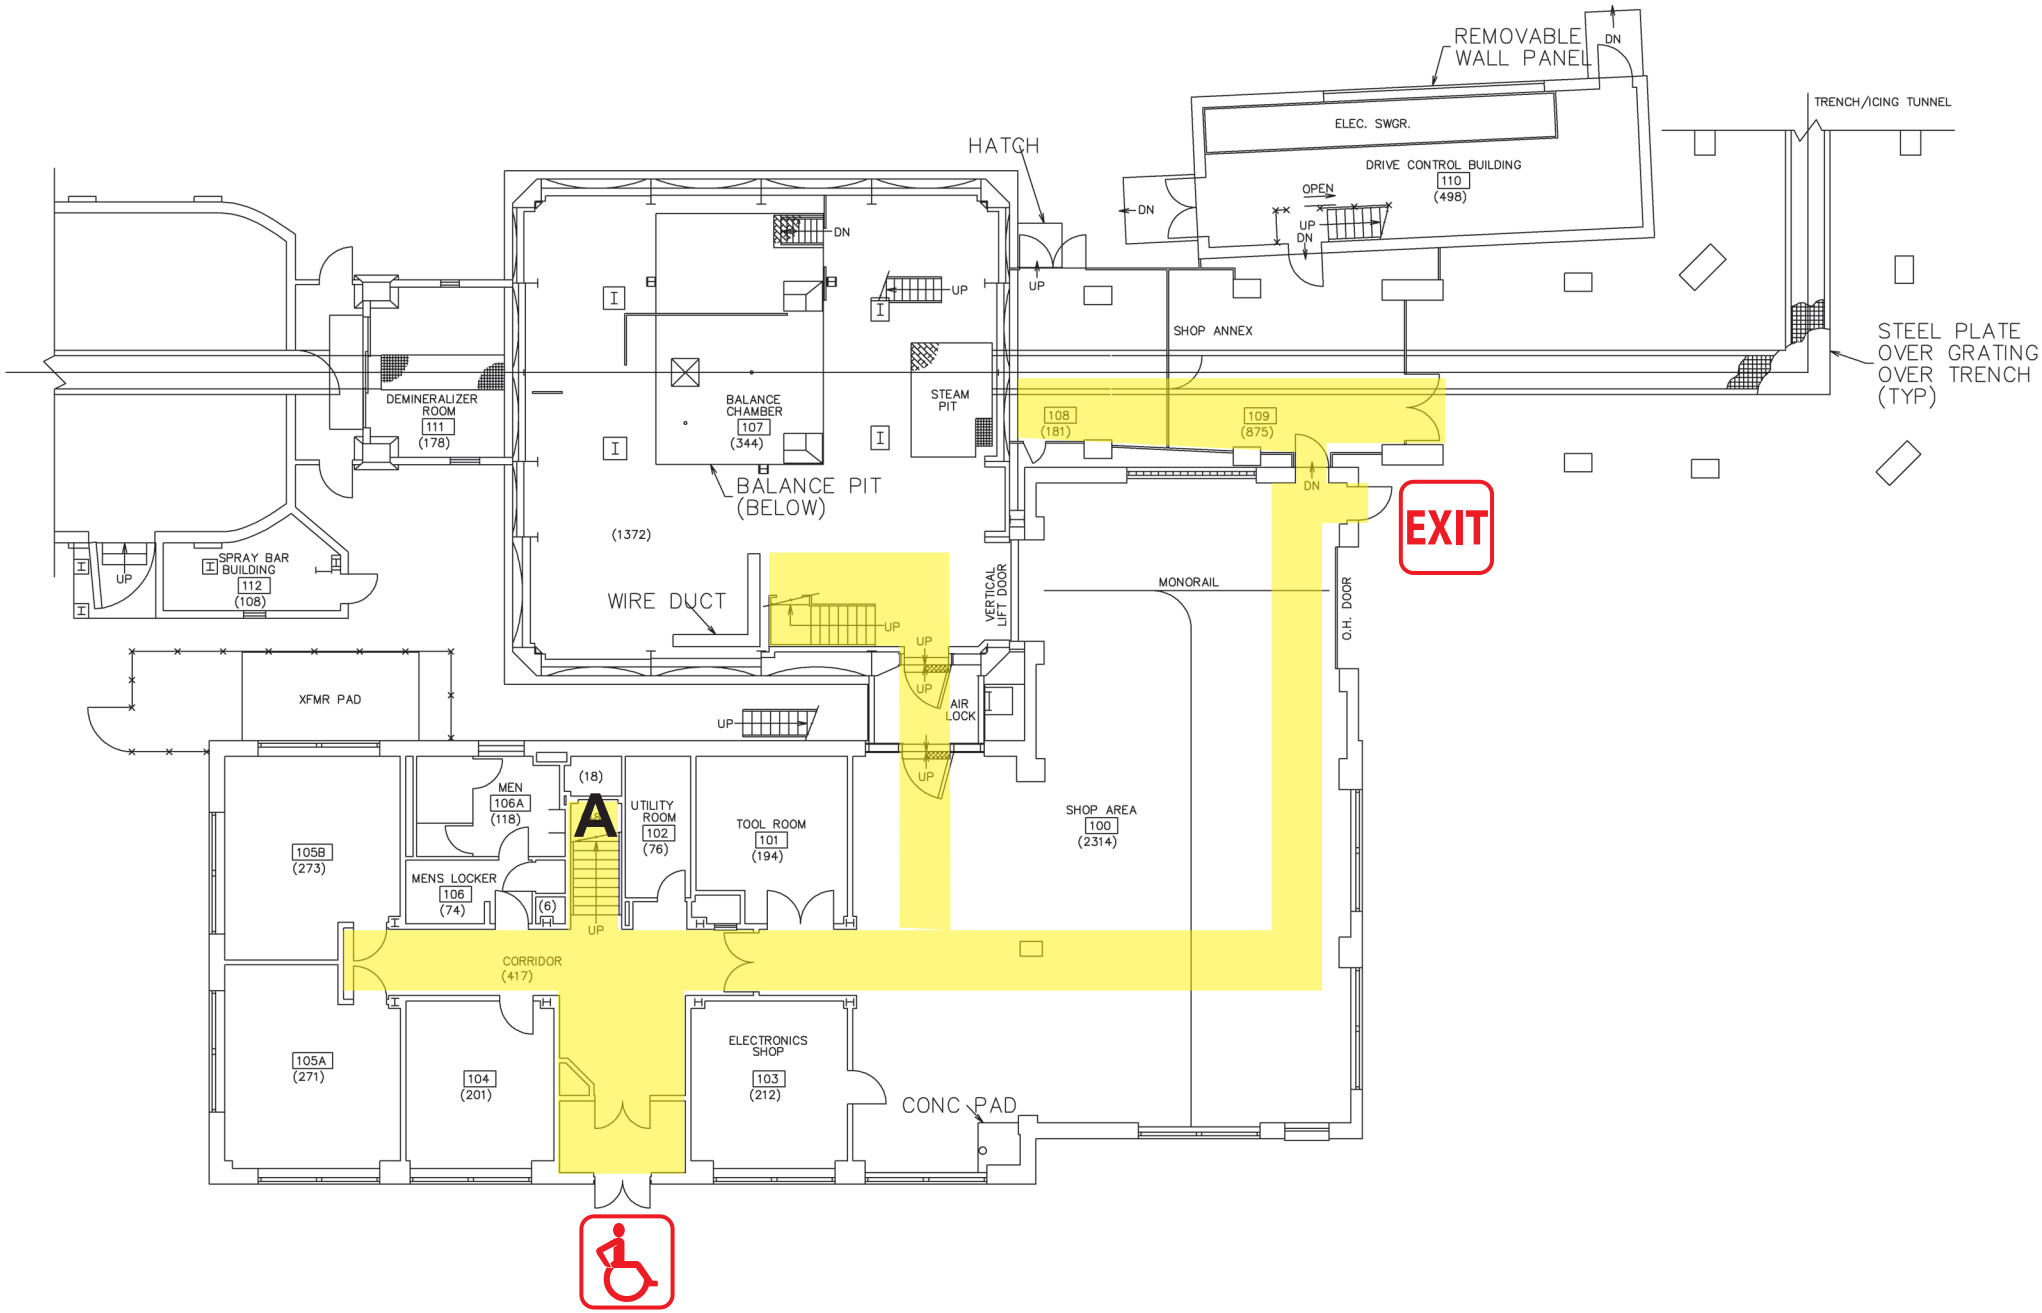


M–1891–38b
Apr 09

# Building 11 Second Floor Emergency Action Plan

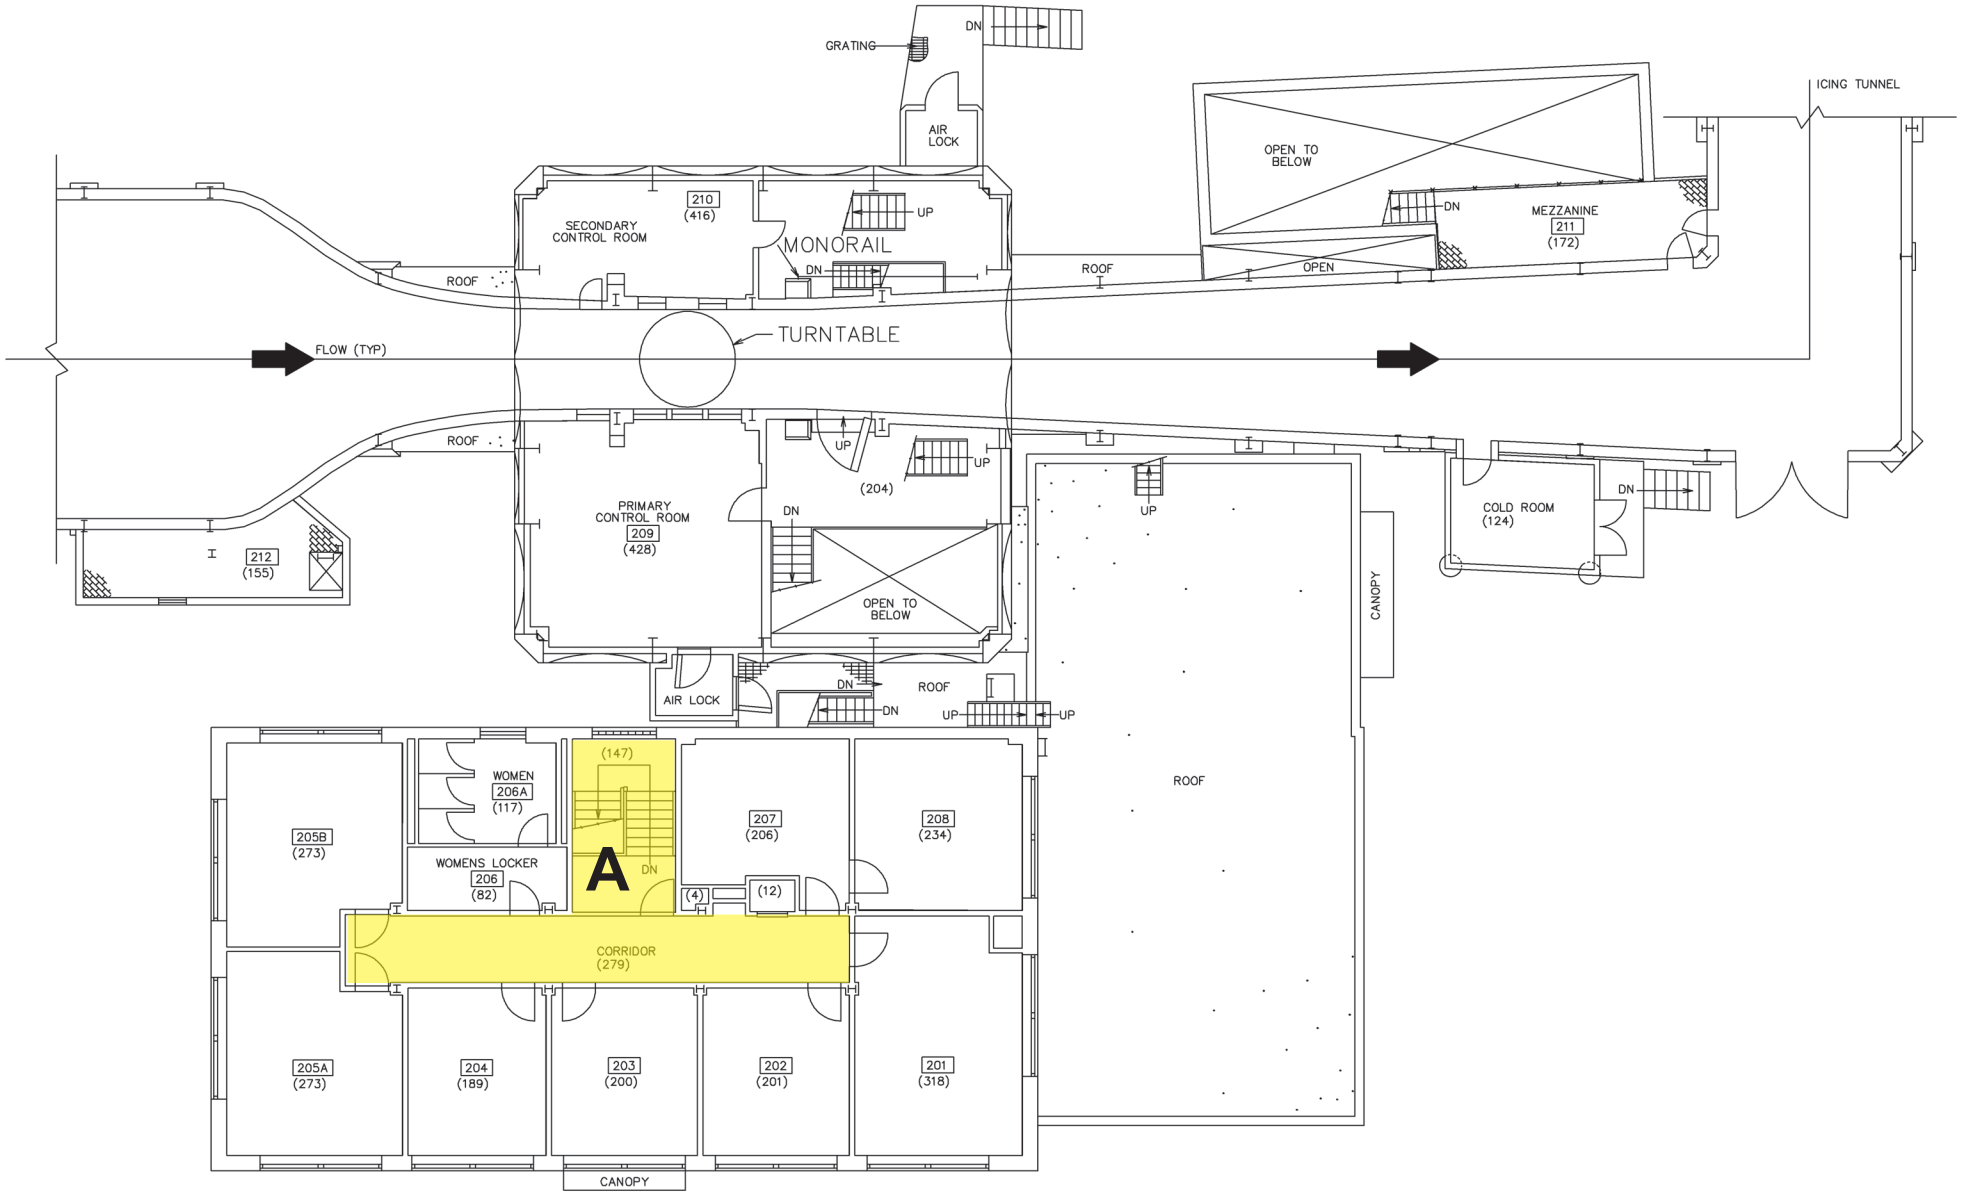


M–1891–38c
Apr 09

# Building 11 Muster Points

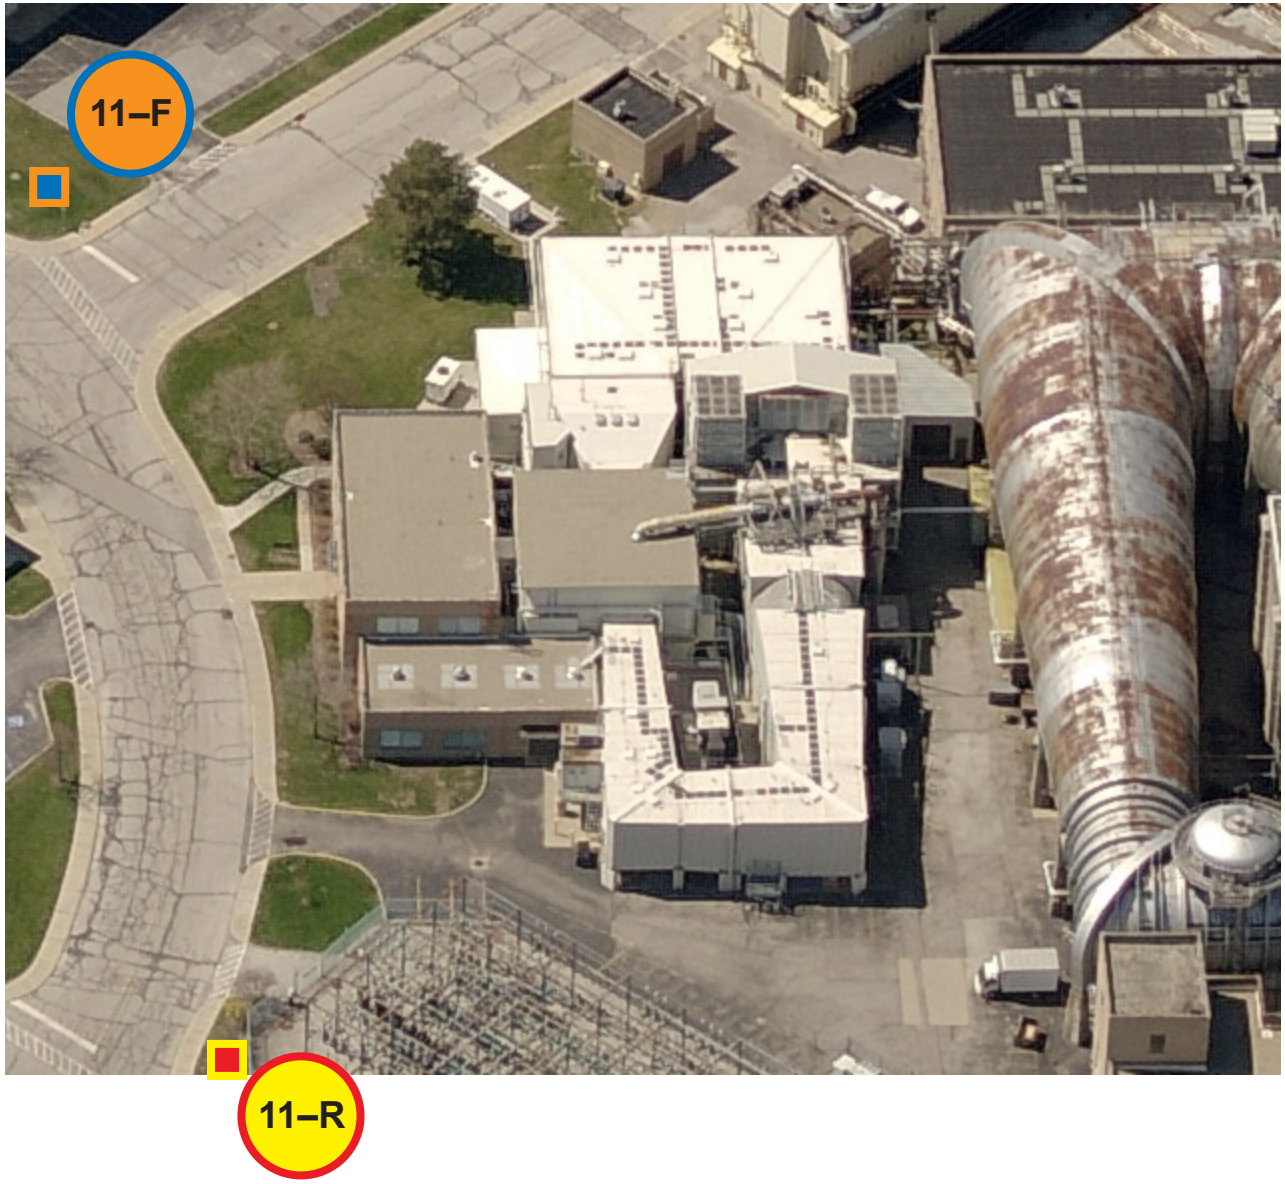


M–1891–38d
Apr 09